

Firmware Upgrade of the ZTH EU

- **Simplest use**
- **Upgrade using USB connection**

**Required material for the Upgrade****Material**

Notebook with Windows 7 / 8 / 10 and free USB Interface	-
Programming software "ZTH-Updater Vx_xx.exe", Executable program including ZTH firmware	Belimo Website

Update Preparation

Download the ZTH-updater from the Belimo website. No installation is required. If the required device driver is not installed on the computer, it will be installed automatically during the first start.


Note For computers with Windows XP operating system, the driver has to get downloaded from the Belimo web site and installed manually.

Update procedure

1. Start ZTH Updater program




2. Connect ZTH with the computer

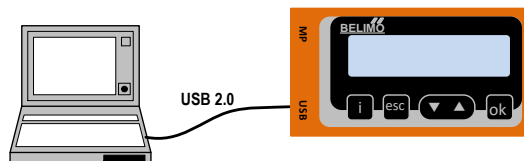


Update Ablauf

3.

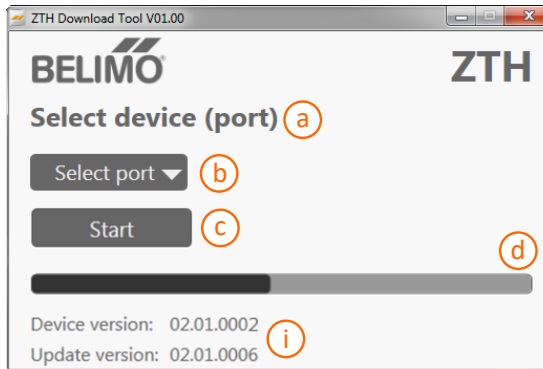

- a** If a ZTH is indicated, the status change from "Scan for Devices..." to "Select device (port) "
- b** Select correct USB port
- i** Version information:
Version on the device and the update program
- c** Start update
- d** Observe the progress bar

4. Final message of the upgrade process

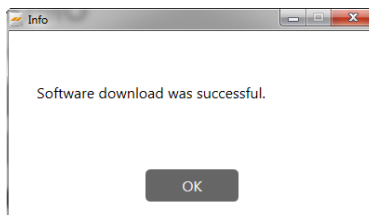

Troubleshooting

Message	Possible cause	Solve problem
	There is no ZTH connected to the computer	Connect ZTH on the computer
	USB is not installed (correctly)	Download USB driver from the Belimo website and install the driver manually (administrator privileges required)